


- Slide Platform Adapter™ Stud into rear T-Slot on EXFIL™ Rail. Ensure the Stud is fully seated in the rail slot. No removal of the rail is required for installation.
- Push Platform Adapter™ Plate over Stud Post. Ensure the upward arrow on the plate is facing outward and upward.


PLATF For CHARGE AMP and EXFIL RAIL INSTALLATION INSTRUCTIONS





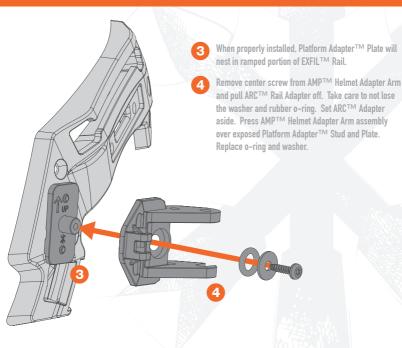



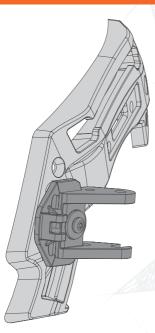

5 Reinstall center screw. Torque to 16-18 in-lb. When properly tightened, AMP™ Helmet Adapter Arm assembly will not slide on rail. It should only be able to pivot. DO NOT OVER TIGHTEN.